



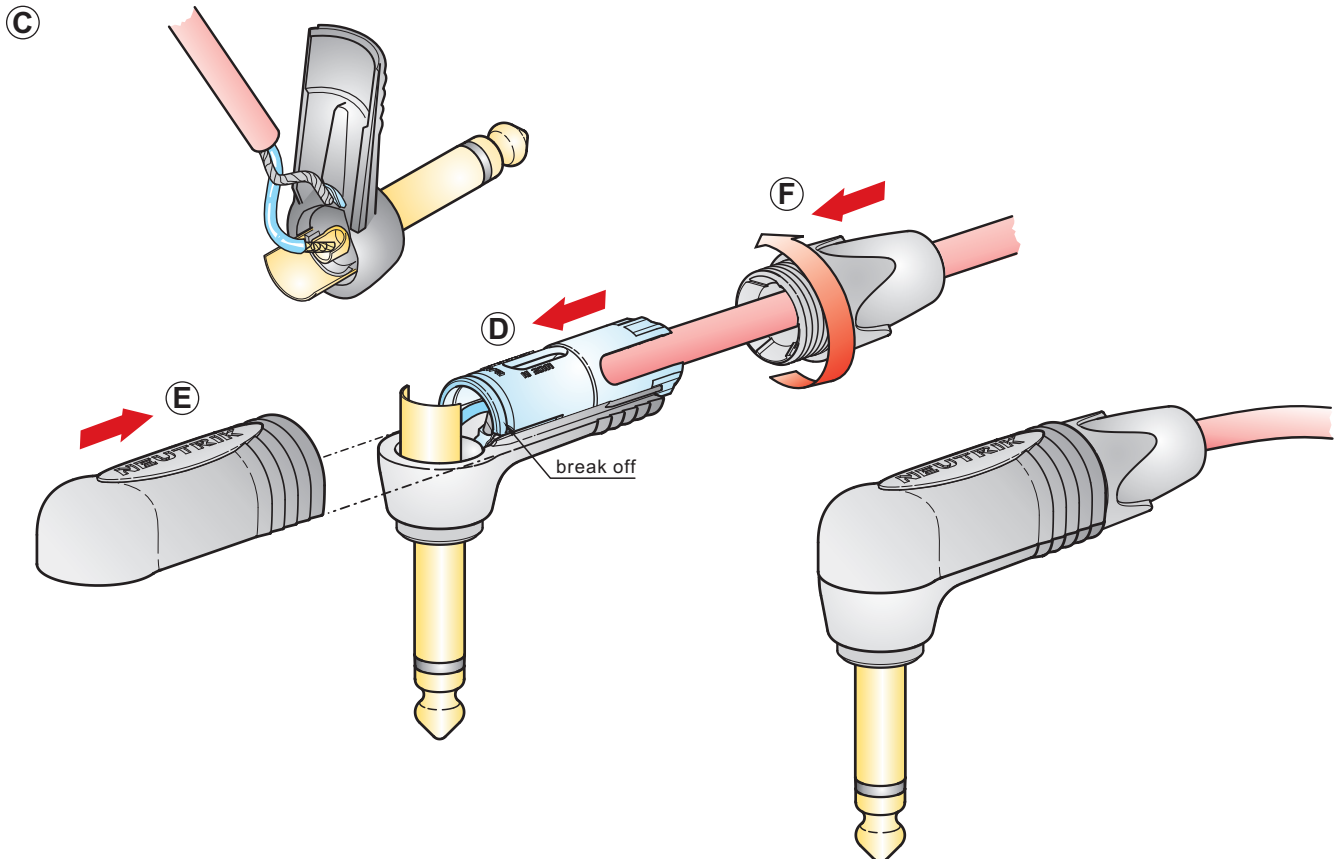

# ASSEMBLY INSTRUCTION

## NP\*RX | 1/4" Professional Right-Angle Phone Plug

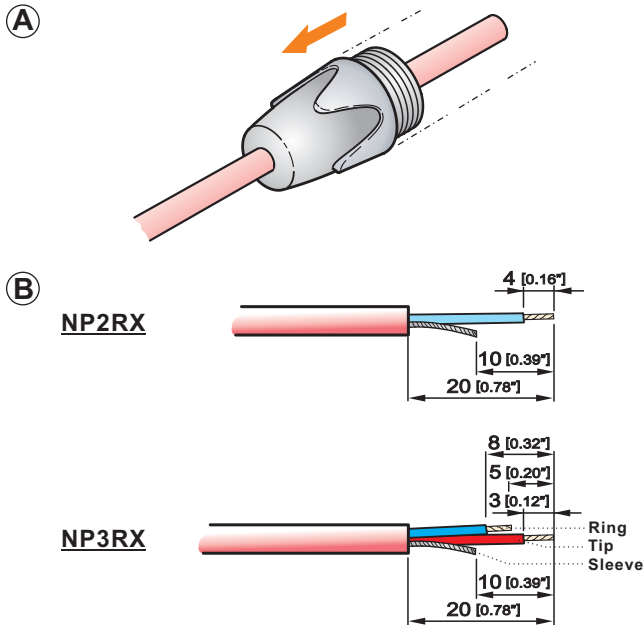

- A** Slide the boot onto the cable.
  - B** Prepare cable as shown.
  - C** Solder the wire ends in the order Sleeve, Ring and Tip.
  - D** Position the chuck onto the cable and align chuck with plugfinger.
- Attention:**  
If using a cable with O.D. > 5.50 mm [0.216"] break off marked part of the chuck.
- E** Push the cover to the stop position on the shell.
  - F** Finish the installation by tighten the bushing onto the connector.

NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93  
 NEUTRIK USA Inc. USA T: +1 704 / 972 3050 F: +1 704 / 438 9202  
 NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439  
 NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131 / 280 830

NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511  
 NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796  
 NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052

Draft. Nr.: BDA 180-0 / 3102M1511 | Update: 17.12.2008 | Data subject to change without prior notice. ©2008 NEUTRIK®. ALL RIGHTS RESERVED.